

## Instructions of tracking when cruising & WDR for 1010 camera module

### 1. Function: auto tracking when cruising among presets

**(1) Availability---** for all models of our auto tracking ptz

**(2) Description of function---** When the camera is cruising among saved presets, it will detect and follow moving object automatically when it stops at a specific preset; while after the moving object gets out of view for pre-defined interval, the camera will go back to its previously stopped preset and cruise to next preset again

#### **(3) How to start this function**

<1> Save 95<sup>th</sup> preset to access the main menu / Dome Settings 1 / Motion / Park Action, set it as Repeat Last.

<2> Save 95<sup>th</sup> preset to access the main menu / Dome Settings 2 / Tracking Setting / Lost Act, set it as Stop Track.

<3> Save 95<sup>th</sup> preset to access the main menu / Dome Settings 2 / Cruise / Dwell Time, set it as 8.

<4> Finally, you can use your controller to call 92# preset to start this function.

### 2. Wide Dynamic Range

**(1) Availability---** only for our 36x auto tracking ptz with Sony FCB-EX1010 camera module.

**(2) Description of function---** enables the camera to provide clear images even under back light circumstances where intensity of illumination can vary excessively. The WDR allows the camera to filter the intense back light surrounding a subject and thus enhances the ability to distinguish features and shapes on the subject.

#### **(3) How to start this function**

Use your controller to call 94<sup>th</sup> preset to start this function; while you can call 94<sup>th</sup> preset again to disable this function.